

Cloud Video
Management
System

Roles Guide


Contents

Definitions	3
<hr/>	
User Levels	4
<hr/>	
Roles and Camera Permissions	5
<hr/>	

Definitions


- **Integrator** is a partner who has the ability to connect new Customers to VSaaS services. VSaaS bills integrator for total traffic used by all customers connected by this integrator. Integrator bills customers individually for traffic and services each customers have used.
- **Customer** is the owner of the cameras and equipment who wants to connect his equipment to cloud services. Customer pays monthly subscription fee to integrator.
- **Manager** can be either program or billing administrator and performs duties as assigned by integrator to help with customer management.
- **Roles** determine cameras and camera functions that a user can access and/or control. One camera can be added to multiple roles and different permission can be set for each camera parameter under each role. There are two role types Admin and Guard. One user can have multiple roles but only of the same type.
- **Admin** is a user with access to Admin portal. Can review/change camera and alerts settings according to assigned role. Can add new cameras.
- **Guard** is a user without access to Admin portal. Can only view cameras through web-interface or mobile app, create clips, use PTZ controls and/or share cameras with others according to assigned role.

User Levels

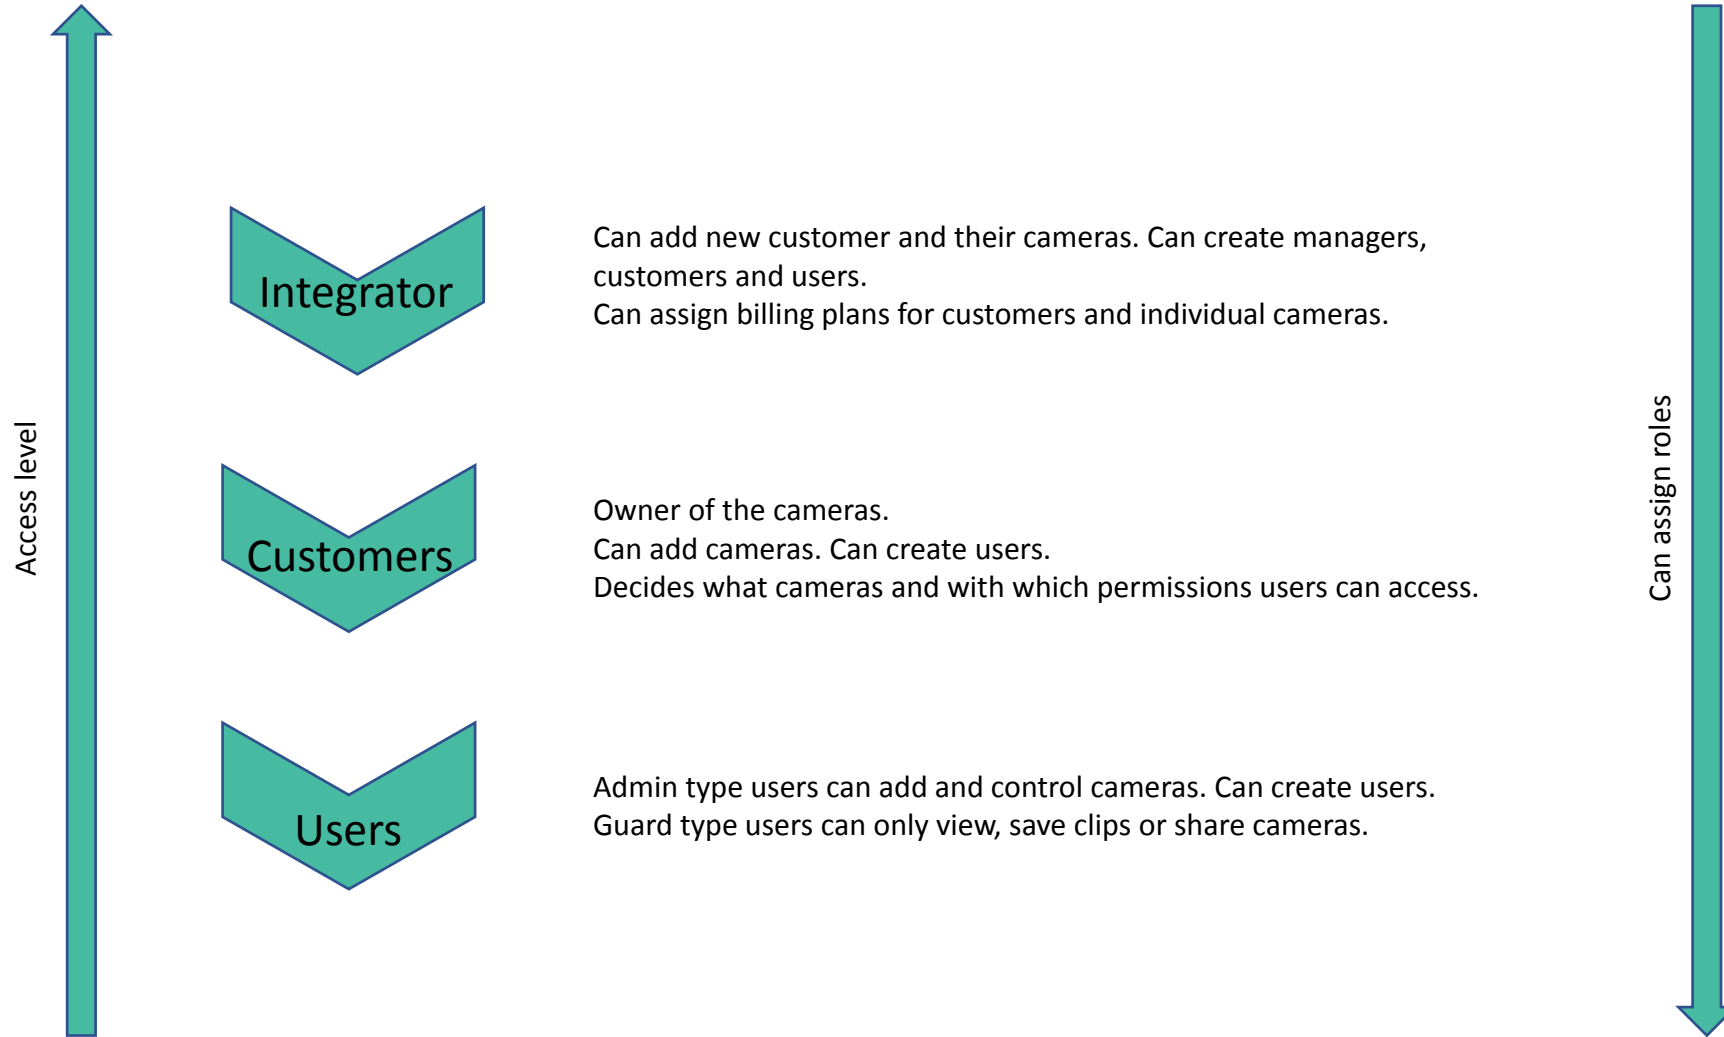

Roles and Camera Permissions

Each camera has 5 permissions that can be assigned to a role, the role is then assigned to a user granting access to the specified camera and select functions.

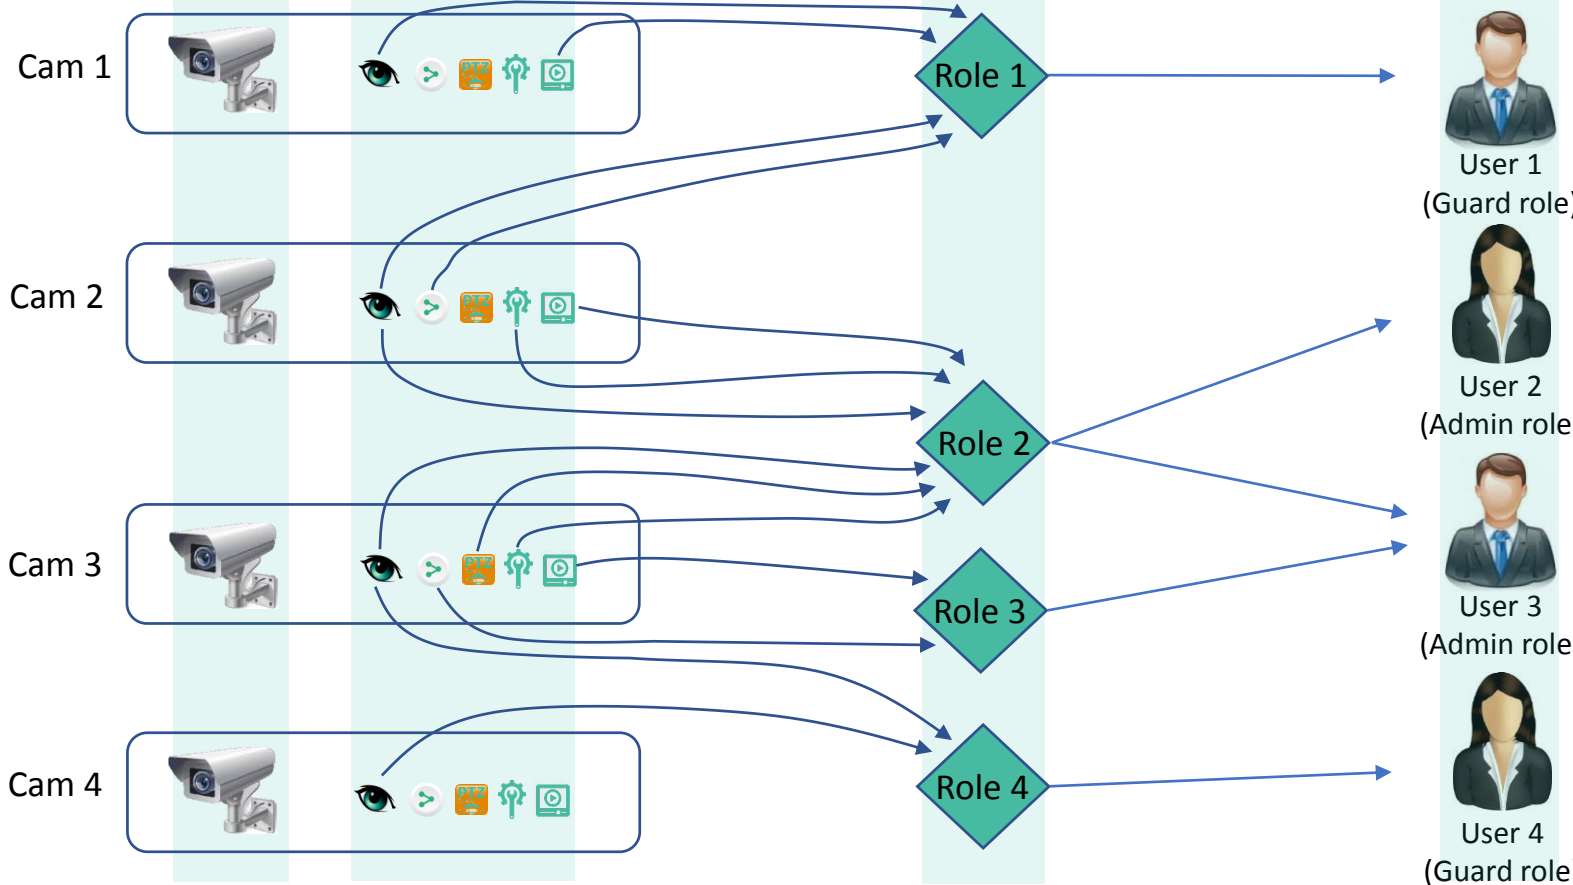

User 1 is assigned Role 1 and can view and save clips from Camera 1; view and share Camera 2. Being a Guard type role this user does not have access to Admin Portal.

Users 2 and 3 can view, configure and save clips from Camera 2; view, use PTZ controls and configure Camera 3. Additionally, User 3 can share and save clips from Camera 3. Being an Admin type role this user can access Admin Portal.

Users 4 can only view Cameras 3 and 4. Being a Guard type role this user does not have access to Admin Portal.

Camera permissions			
	View camera		Configure camera
	Save clips		Share camera
	PTZ control		