

## REV2200 - ASSEMBLY MANUAL

## PACKING LIST

| Frame   | pcs         |
|---|-------------|
| Column  | 2           |
| Feet  | 2           |
| End pipe  | 2           |
| Outer pipe  | 2           |
| Connection pipe   | 2           |
| Cable clamp   | 6           |
| Rubber washer   | 8           |
| Hole cap  | 8           |
| Control Box / Hand control  | pcs         |
| Control box   | 1           |
| Hand control  | 1           |
| AC cable  | 1           |
| Screws  | pcs         |
| ociens  | pes         |
| Screw for motor house / Outer pipe, M6x16   | 8           |
|   | -           |
| Screw for motor house / Outer pipe, M6x16   | 8           |
| Screw for motor house / Outer pipe, M6x16<br>Screw for feet, M10x16mm   | 8           |
| Screw for motor house / Outer pipe, M6x16<br>Screw for feet, M10x16mm<br>Tailstock for connection pipe, M10x8mm | 8<br>8<br>8 |

| Tightening torque   |              |
|---|--------------|
| Tailstock   | Maximum 6Nm  |
| Screw for motor house and outer pipe                            | Maximum 10Nm |
| Screw for feet and tabletop                                     | Maximum 10Nm |
| Screw for hand control  | < 6Nm        |
| Make sure all screws are tightened, also after a period of use! |              |

## Reset the desk before use


Press both up and down buttons at the same time for 3 seconds. Continue pressing the buttons until both columns are in lowest position. When finish reset, the control box makes a sound and the buttons can be released. Now the system is operational.


## WARNING

Carefully arrange all the cables not to be damaged by tabletop screws.





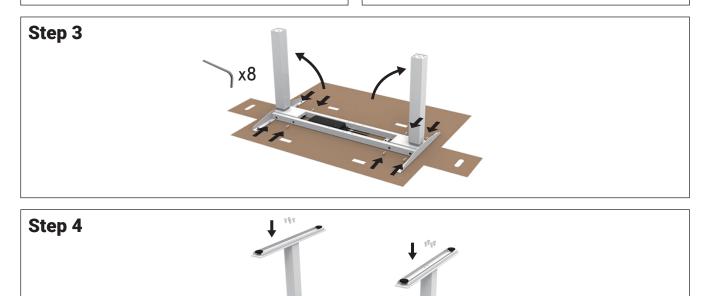

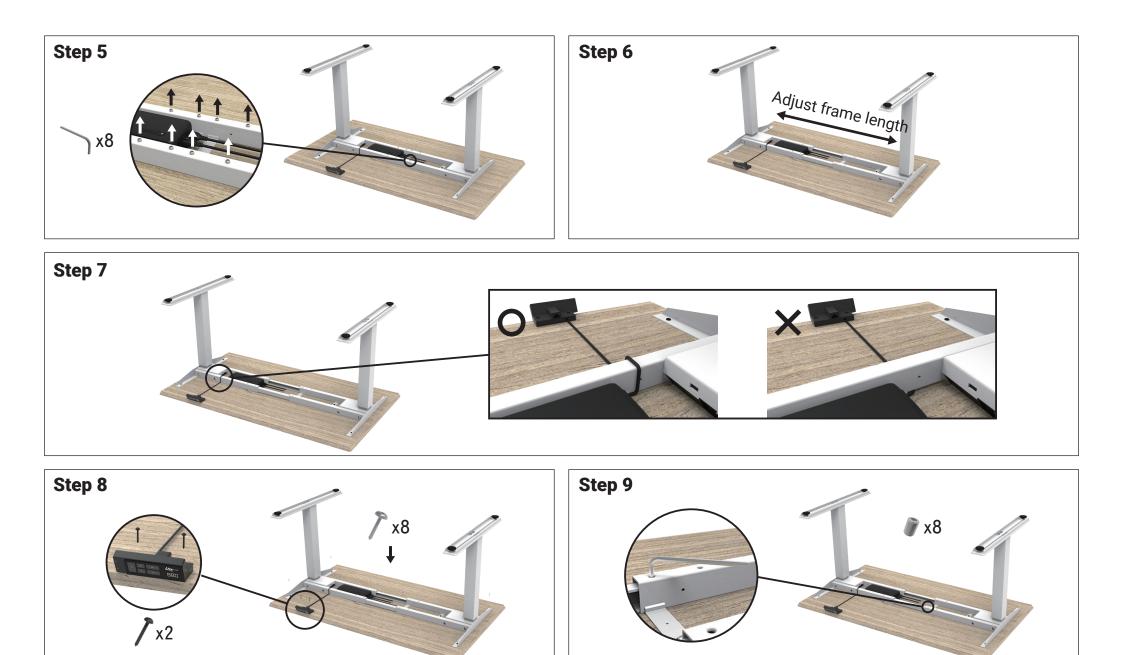

www.rev-247.com | 800.743.7738