

## PACKING LIST

Frame	pcs
Column	4
End pipe	4
Outer pipe	8
Connection pipe	4
Cable clamp	16
Rubber grip	8
Rubber washer	36
Hole cap	8
Side beam	2
Control Box / Hand control	pcs
Control box	2
Hand control	2
AC cable	2
Screws	pcs
Screw for motor house / Outer pipe, M6x16mm	16
Tailstock for connection pipe, M10x20mm	16
Screw for side beam, M10x12mm	8
Screw for tabletop, Ø5x20mm	28
Screw for hand control, Ø4x22mm	4

## Tightening torque

Tailstock	Maximum 6Nm
Screw for motor house and Outer pipe	Maximum 10Nm
Screw for side beam and tabletop	Maximum 10Nm
Screw for hand control	< 6Nm

**Make sure all screws are tightened, also after a period of use!**


## Reset the desk before use

Press both up and down buttons at the same time for 3 seconds. Continue pressing the buttons until both columns are in lowest position. When finish reset, the control box makes a sound and the buttons can be released. Now the system is operational.


## WARNING

Carefully arrange all the cables not to be damaged by tabletop screws.


### Step 1

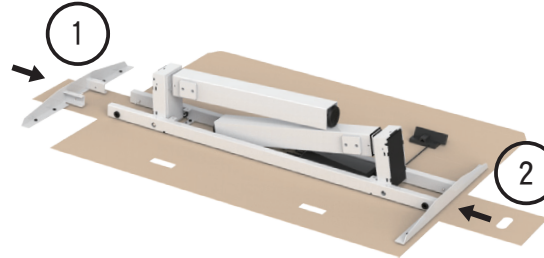

### Step 2

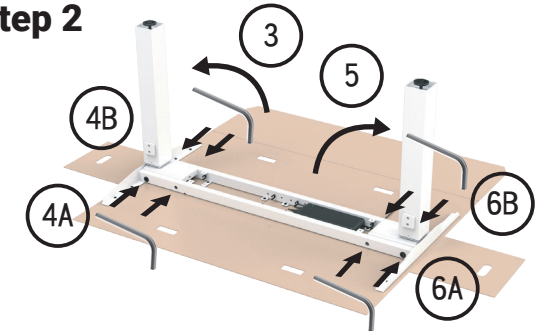



### Step 3

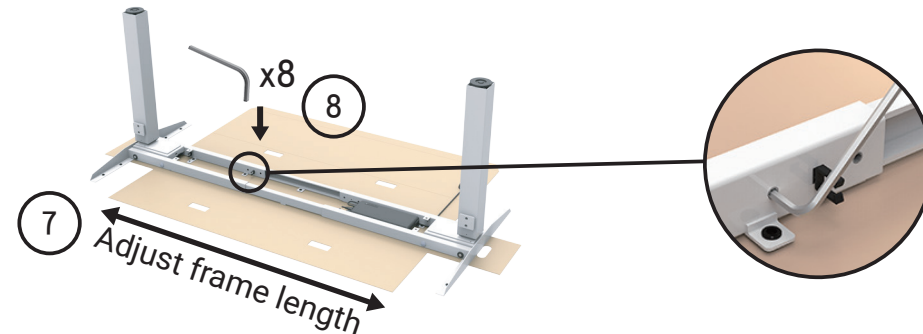

### Step 4




## Step 5

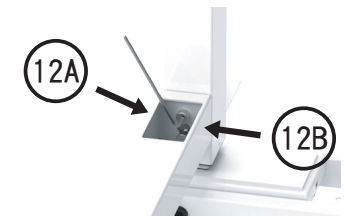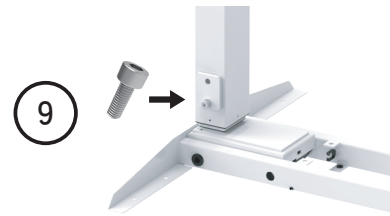

## Step 6



## Step 7

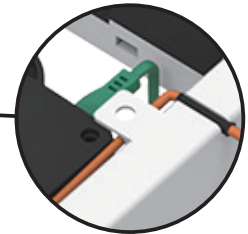

## Step 8

