




Quick Reference Guide










Lyric



Basic Functions

Press the 'Home'  button below the touchscreen to return to the Home screen from other functions.

The Security Menu will show the following options

- Security features**  on the Home screen
- Arm in Stay mode**  and enter a user code
- Arm in Away mode**  and enter a user code
- Disarm system & silence alarms**  and enter a user code. Repeat to silence alarms/alerts
- Panic**  Press and hold this button below the touchscreen.
Then press:
 or  or  or  on the touchscreen

Arming the System

The Home button beneath the screen lights green when the system is ready to be armed.

To Arm

- Arm Away** Press the *arm away* button and enter your 4 digit user code. This is used for times when no one is home and all perimeter and interior zones are protected.
- Arm Stay** Press the *arm stay* button and enter your 4 digit user code. This is for times when the house is occupied but only protects perimeter zones (doors).
- Arm No Delay** Press the *arm stay* button. Then press 'Entry Delay' (on the blue bar) to *OFF*. This is used for times when the home is occupied and protects perimeter zones and interior motion sensors are deactivated.
- Quick Arm** Press to arm the system in any mode without needing to enter a user code. This needs to be enabled by Custom Alarm. A user code is ALWAYS needed to disarm the system.

To Disarm



Touch the *Disarm* button, enter your 4-digit user code. The system beeps and announces "Disarmed" (or will beep if voice is not activated).

Bypassing Sensors or Zones

Bypassing allows arming the system while intentionally leaving selected zones unprotected. Bypassed zones will NOT trigger an alarm. Please note; Fire, CO and Panic zones CANNOT be bypassed.

To Bypass a Zone

Before arming the system, press **Zones** on the Security menu. A list of your system's zones appears. Faulted or (open) zones are shown in red or orange. Use the up and down arrows to scroll through the list of zones. Select the zone to be bypassed and press the **Bypass** button at the bottom of the screen. A keypad will appear. Enter your 4 digit user code. The zone list reappears with the Bypass icon shown for the affected zone.

Press back arrow  or home button  to return back to the Security screen. System will show "Ready to Arm-Bypass" on top of screen.

Keep in mind, the process of bypassing a sensor only lasts until the system is disarmed next, then the process has to be repeated on the next arming.

User and Security Codes

On the Home Screen, press **Security**.

Press **Tools**, and enter the Master User Code.

Select Users. Existing Users are displayed, along with the Guest and Duress code listings. Four asterisk (****) appear on each listing that has a security code already established.

Add new user code

Press **Add New** and a new user screen appears.

You can change the user number and enter text of a person's name. Then enter a 4 digit code for that user. Press '**Save**' in the bottom right corner.

Deleting a user code

Select the listed user

At the bottom of the screen, press **Delete** and then **Yes**. Press '**Save**' in the bottom right corner.

Enable Door Chime

The Lyric can give audible notifications when a protected door opens while the system is disarmed. This can be used to know when a zone such as a perimeter door is opened.

On the Home Screen, select **Settings**. Select **Chime** to enable chime sounds or **Voice** to activate voice. Adjust the volume with the slider and press **Save**.

Adjusting Keypad Volume & Brightness

Adjust voice and system sounds with the Volume slider. System sounds include zone alert chimes and countdown beeps.


Adjust touchscreen brightness with the Brightness slider.

Press '**Clean**' before cleaning the touchscreen. Lyric hides the controls and counts down 15 seconds. During this time, a soft, damp cloth can be used on the screen without affecting the controls.

To View or Join Available Wi-Fi Networks

On the Home Screen, press **Security**.

Press the **Tools Menu**, Enter User Code, press the **Wi-Fi Config** button. A list of Wi-Fi options appears.

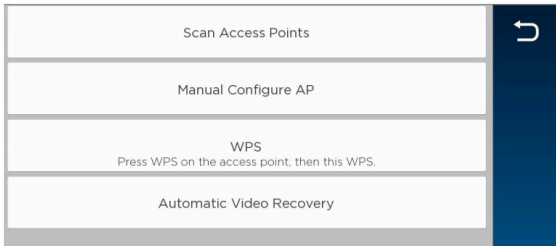

Press **Scan Access Points**. A list of available networks is displayed. Use the up and down arrows to select the desired network and press **Edit**. The network information is displayed.

If a password is required, press **Password Key** and enter the password.

Press the **Save** button and then **Join**.

Click to watch Lyric Video Tutorials

