



Quick Reference Guide

Vista



Disarm

Enter 4 digit code + 1 (Disarm)

Arm Stay (No Motion Sensors)

Enter 4 digit code + 3 (Stay)
(if 'Quick Arm' is enabled, press # + 3)

Arm Night (No Motion, No Door Delay)

Enter 4 digit code +7 (Instant)
(if 'Quick Arm' is enabled, press # + 7)

Arm Away (Motion Sensors On)

Enter 4 digit code +2 (Away)
(if 'Quick Arm' is enabled, press # + 2)

Check System Status

Press * to show if any sensors are currently open or in trouble.

Clearing an Alarm

Enter 4 digit code + 1 (Disarm) once to silence, then repeat 4 digit code + 1 (Disarm) to clear alarm and disarm fully.

Bypass a Problem Zone

- Know which Sensor (zone) is having the issue. Press * and the display will scroll any troubled/opened zone names, along with a 2 digit number for it.
- You will need to do this command sequence once per zone number if there are multiple sensors being bypassed.
- Once you have found your problem zone number(s), type your 4 digit code + 6 (BYPASS) + Zone number (03, 09, 15, 22, etc.)
- Once all open/troubled zones are bypassed, the system can be armed as normal. The bypasses will clear upon the next disarm, and will need to be re-bypassed when attempting to arm again.

Enable Door Chime (Keypad beeps when door opens)

Enter 4 digit code + 9 (Chime) - The display will indicate whether the chime is on or off. Repeat the command to switch between On/Off.

Add/Change/Delete Codes

User Codes

*Before continuing, if you have the ability to Arm/Disarm your system remotely using either the Alarm.com or TotalConnect 2.0 App/Website, it is **strongly** recommended you only make changes to user codes through the App/Website. Doing so manually using the following steps can cause issues with the App/Website connection with your system.*

Codes are edited by using a command sequence. The first part is the Master Code, the next is the Code (8) function/menu, and the next is the User Number (03, 10,16, etc.), and finally the new code.

Add new code/user for slot 03

Example: Master Code (1234) + 8 (Code Function) + 03 (User Number) + 2580 (New Code for user 03)

Change code for existing user 03

Example: Master Code (1234) + 8 (Code Function) + 03 (User Number) + 9855 (New Code for User 03)

Delete code for user 03

Example: Master Code (1234) + 8 (Code Function) + 03 (User Number + # + 0

Changing the Master Code (Master is always User 02)

Example: Master Code (1234) + 8 (Code Function) + 02 (User Number) + 5258 + 5258 (New Master Code twice)

Upon completing any of the above steps, you should get a confirmation chime sound from the keypad. It is recommended that you test whether your new code has been added/removed by trying to Arm/Disarm with it.

Click to watch Vista Video Tutorials

