


Unlocking the Driver Door with the Key Blade

If your vehicle has no power and the backup power system disables, you can manually unlock the driver door using a key in the position shown.

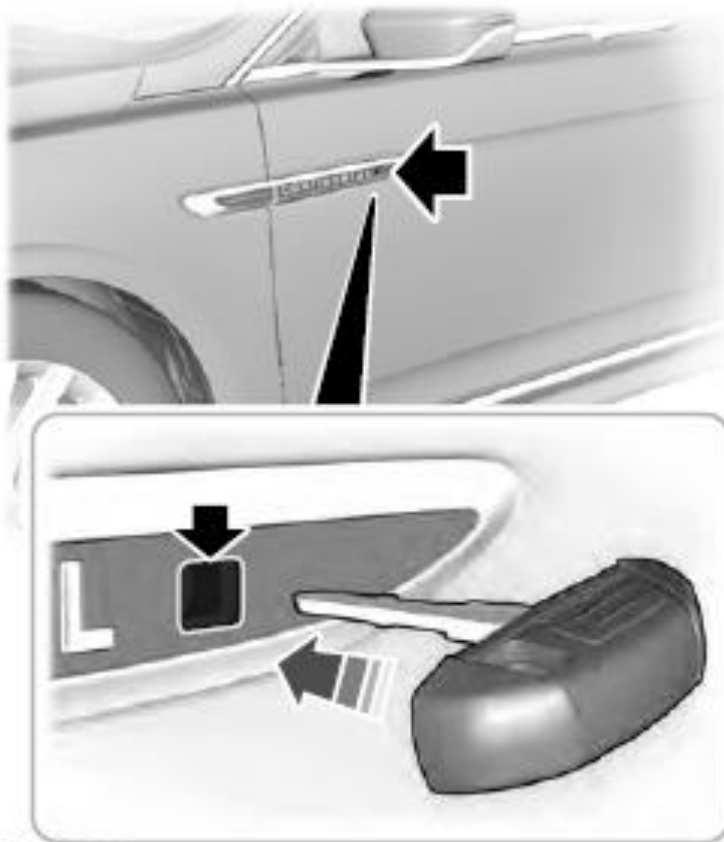

E222424

1. Remove the key blade from the transmitter.
2. Insert the key blade into the lock cylinder.
3. Turn the key clockwise to unlock the driver door.

Note: *All other doors remain locked.*