


## **Locking and Unlocking the Doors with the Key Blade**

If the central locking function does not operate, lock the doors using the key blade in the door handle lock cylinder.

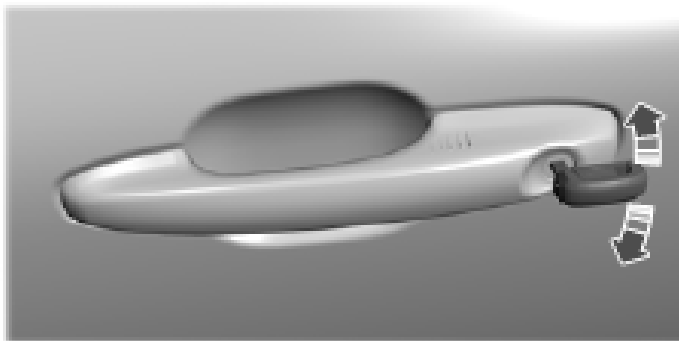

### ***Unlocking with the Key Blade***

Insert the key blade into the driver door handle lock cylinder, turn the key down toward the rear of your vehicle to unlock.