



ANCHOR<sup>®</sup>

BEACON

BLUETOOTH INSTALLATION



## REQUIREMENTS:

- 8,000 or series 2 Go Getter unit with I/O board at revision E (or newer)
- Screw drivers (Phillips #1 and #2)
- 8 mm Nutdriver





## INSTRUCTIONS:

1. Make sure the unit is powered off and the plug is disconnected.



## INSTRUCTIONS:

2. Remove the screws around the back panel.



## INSTRUCTIONS:

3. Remove the back panel.



## **INSTRUCTIONS:**

4. Remove the battery harness.



## INSTRUCTIONS:

5. Remove the low and high and speaker harness.
  - a. If applicable please remove the mic receiver harness.



## **INSTRUCTIONS:**

6. Remove the old Bluetooth module.



## **INSTRUCTIONS:**

7. Remove the old harness from the Bluetooth module and use the included harnesses with the new Bluetooth module.



## **INSTRUCTIONS:**

8. Connect the black and white audio cables to BT Audio.



## INSTRUCTIONS:

9. Connect the red and black cables to BT only.



## INSTRUCTIONS:

10. Reinstall the back panel to the unit and tighten with screws.