

rev.
247

WORKSPACE
REINVENTED




SCREW SETS:	NO	FIGURE	SCREW	QTY
	A		M6 x 20mm	2 pcs
	B		M6 x 25mm	6 pcs
	C		M6 x 30mm	2 pcs
	D		M6 x 20mm	2 pcs
	E		M5	1 pcs
	F		M6x16x12mm	10 pcs
	G		M8 x 22 x 10	2 pcs
	H		M8x22x12mm	3 pcs
	I		M6	1 pcs
	J		M8 x 16mm	3 pcs

REVEOC01


ASSEMBLY INSTRUCTIONS

Headrest	Back	Seat	Armrest	Caster	Base	Gaslift	Mechanism
			X2	X5			


STEP 1:

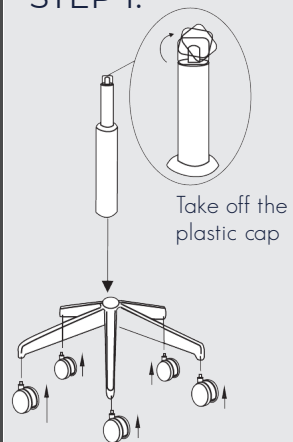

STEP 2:

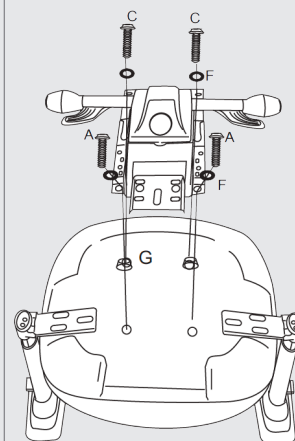

STEP 3:

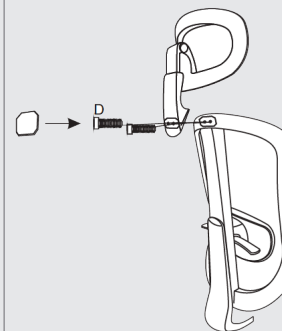

STEP 4:

