


rev.  
247

WORKSPACE  
REINVENTED



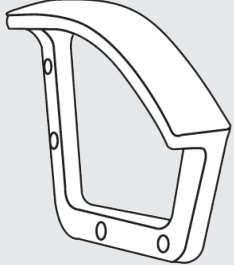
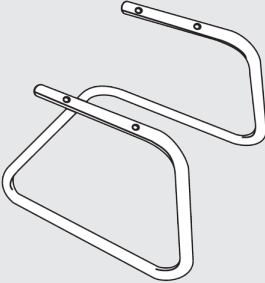
SCREW SETS: S1 x 8  
M6 x 25  
S2 x 4  
M6 x 50  
S3 x 1  
M5  
S4 x 8

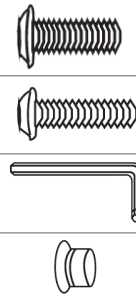


# REVEOC02

ASSEMBLY INSTRUCTIONS

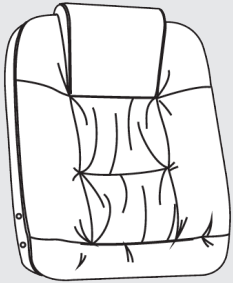

Back	Seat	Armrest	Visitor Frame
			

STEP 1

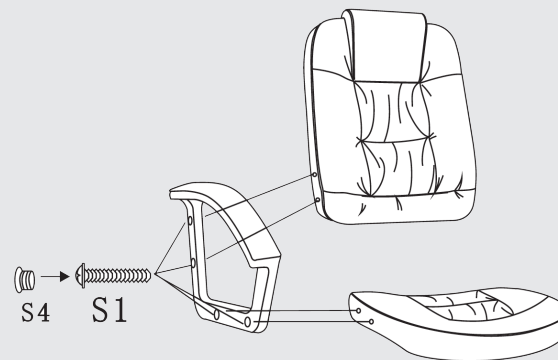

STEP 2:

