

# 2021 Ford Mustang Mach-E

## 12-Volt Entry & Jump Start

Entry and jump starting vehicle with dead 12-volt battery




1 Remove panel in front bumper pressing at top to remove from bumper cover.



2 Make connections at remote terminals to energize vehicle for entry & open driver door.



3 Pull front luggage compartment release twice to fully release front cover for opening.

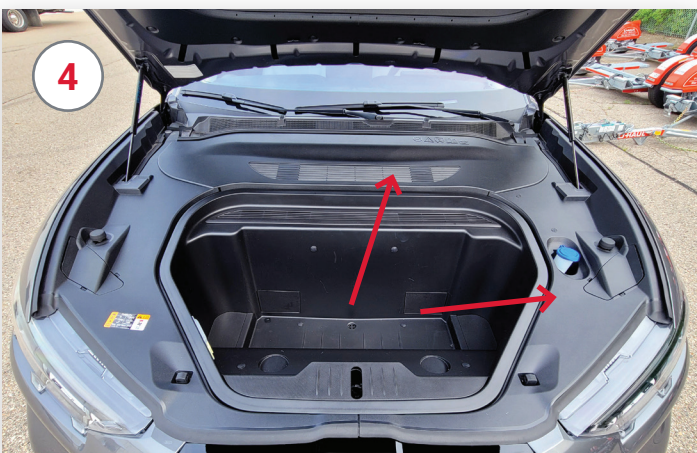


4 Cowl & driver side trim panels will need to be removed.  
No tools are required.

Start with cowl panel along rear edge, passenger side.

Remove driver side panel starting at the rear and working forward.

See images 7 & 8 for clip locations to ease in removal.

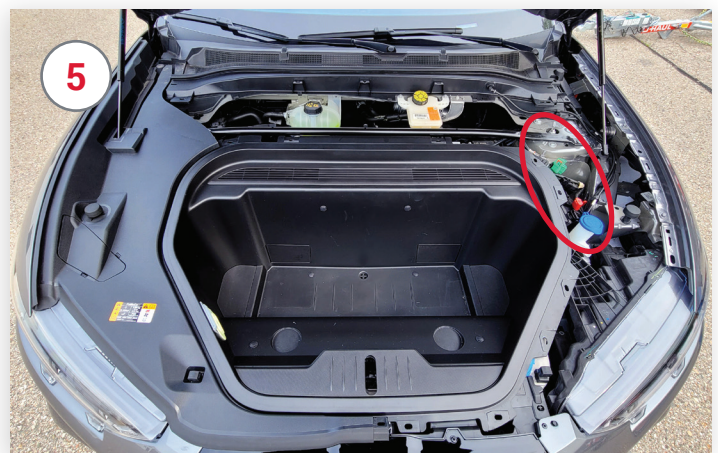

5 Remote jump post locations



## Jump start connection sequence:

1. Connect to positive remote jump post of discharged Mach-E
2. Connect to positive of donor vehicle
3. Connect to negative of donor vehicle
4. Connect to negative remote jump post of discharged Mach-E
5. Verify Mach-E is in **park**
6. Allow several minutes for donor vehicle to charge 12-volt of Mach-E
7. Switch on drive mode by pressing "**START**" button on dash
8. Leave both vehicles connected for three minutes

**DO NOT TURN ON HEADLIGHTS WHILE DISCONNECTING CABLES, PEAK VOLTAGE CAN DAMAGE THE BULBS**

9. Disconnect cables in reverse order

