


Welcome to your MyLife365 HUB

Charging Port

Insert small end of charger here.

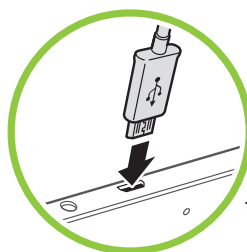

★ only fits one way

Power Button

Hold to turn Hub on.
Hold to turn Hub off.
Press to sleep or wake.

Volume Buttons

Press top to raise.
Press bottom to lower.

Resource Library Application

See back of page for detailed information on this application.

Touch Screen


Access apps and use the keyboard by touching the screen with a finger.

Home Button

Return to the main apps screen. Press to wake.

Charging Cable with Power Adapter

★ only fits one way

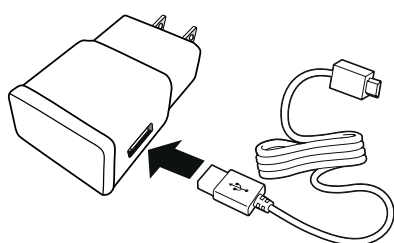


Resource Library

Resource Library

1 Open Resource Library

Tap the Resource Library icon to open. Tap the folders to open content. The Hub is pre-loaded with content.

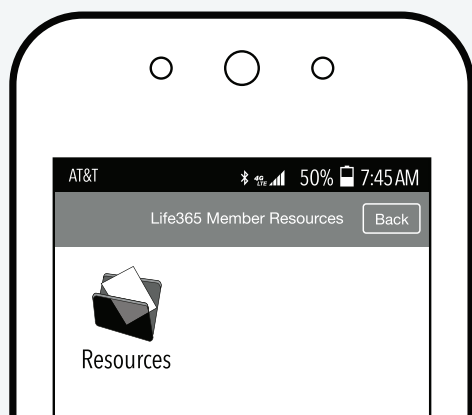

2 Open Content

Tap the document icon to open. Tap the (◀) back button to close the document and return to library. Tap the Home button to return to the Home screen.

